

Art. N30353

CITROËN JUMPY, PEUGEOT EXPERT,
TOYOTA PROACE

04/16 →

TOYOTA PROACE VERSO

05/16 →

CITROËN SPACE TOURER,
PEUGEOT TRAVELLER

06/16 →


OPEL VIVARO, OPEL ZAFIRA LIFE

03/19 →

FIAT SCUDO





01/22 →

KIT x6

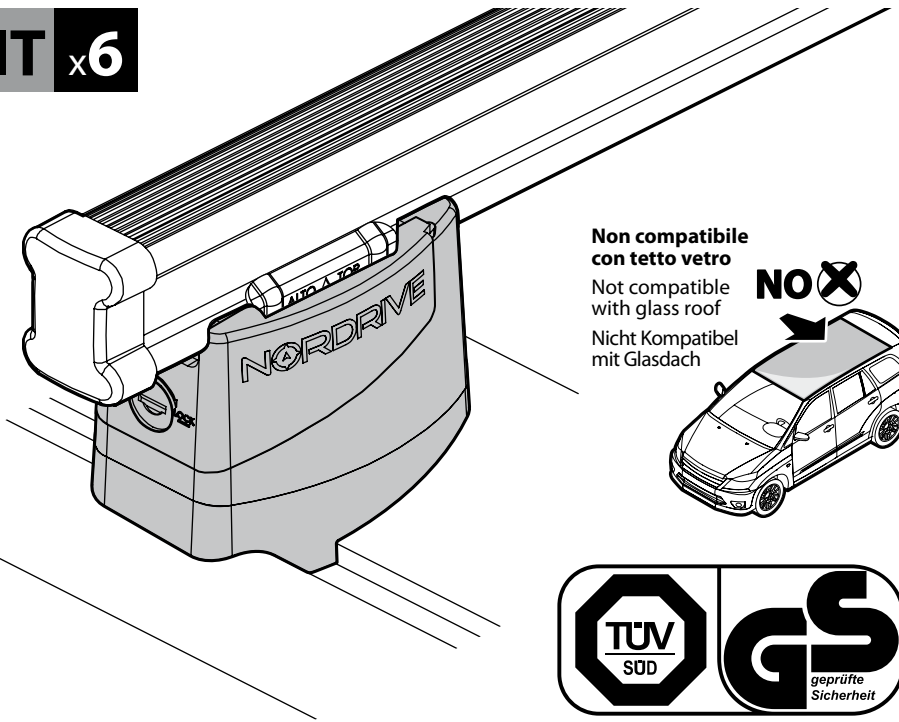

Non compatibile
con tetto vetro
Not compatible
with glass roof
Nicht Kompatibel
mit Glasdach

NOX

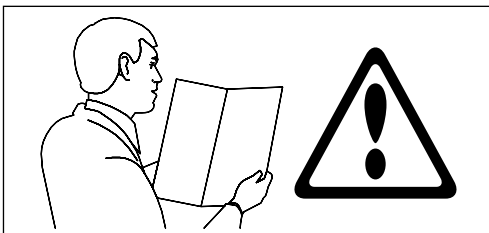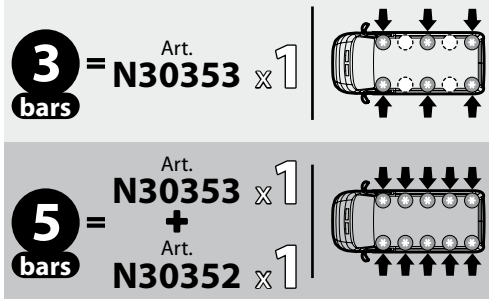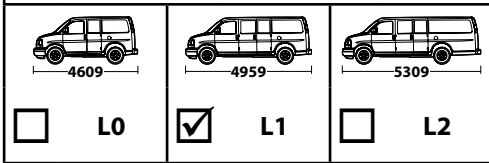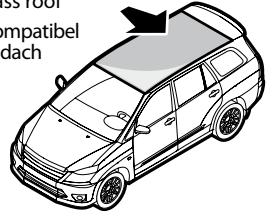

- (I) ISTRUZIONI DI MONTAGGIO
- (GB) FITTING INSTRUCTIONS
- (D) MONTAGEANLEITUNG
- (F) INSTRUCTIONS DE MONTAGE
- (E) INSTRUCCIONES DE MONTAJE
- (P) INSTRUÇÕES DE MONTAGEM
- (NL) MONTAGE-INSTRUCTIES
- (S) MONTERINGSANVISNING
- (FIN) ASENNUSOHJE
- (EST) PAIGALDUSJUHEND
- (AT) STIPRINÁŠANAS INSTRUKCIJA
- (LT) PRITVIRTINIMO INSTRUKCIJOS
- (PL) INSTRUKCJA MONTAŻU
- (RUS) Инструкции по установке
- (CZ) NÁVOD NA MONTÁŽ
- (SK) NÁVOD NA MONTÁŽ
- (SLO) NAVODILA ZA PRITRJEVANJE
- (HR) UPUTA ZA SASTAVLJANJE
- (H) A FELSZERELÉS MÓDJA
- (GR) Οδηγίες συναρμολόγησης
- (TR) MONTAJ TALIMATLARLARI
- (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
- (SRB) UPUTSTVA ZA MONTAŽU

- (I) ADATTO PER
- (GB) SUITABLE FOR
- (F) INDIQUÉ POUR
- (D) GEEIGNET FÜR
- (E) ADECUADA PARA


NORDRIVE KARGO SERIES



Kargo
ACCIAIO
Steel

- (I) BARRE KARGO
- (GB) KARGO BARS
- (F) BARRES KARGO
- (D) DACH-LASTENTRÄGER KARGO
- (E) BARRES KARGO


Art. N10010 x3

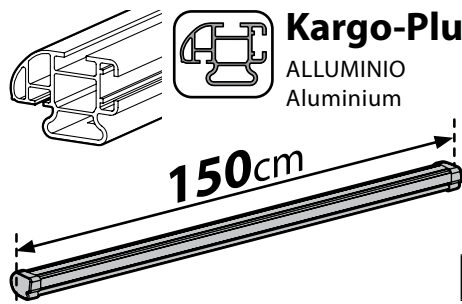

Kargo-Plus
ALLUMINIO
Aluminium

- (I) BARRE KARGO-PLUS
- (GB) KARGO-PLUS BARS
- (F) BARRES KARGO-PLUS
- (D) DACH-LASTENTRÄGER KARGO-PLUS
- (E) BARRES KARGO-PLUS


Art. N10040 x3

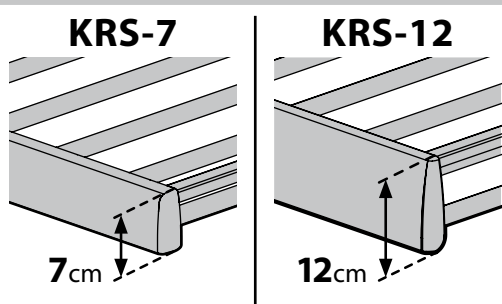

KRS-7

KRS-12










- (I) CESTE PORTATUTTO KRS-7 / KRS-12
- (GB) KRS-7 / KRS-12 VAN ROOF RACKS
- (F) GALERIE KRS-7 / KRS-12
- (D) DACHKÖRBEIN KRS-7 / KRS-12
- (E) BACAS KRS-7 / KRS-12












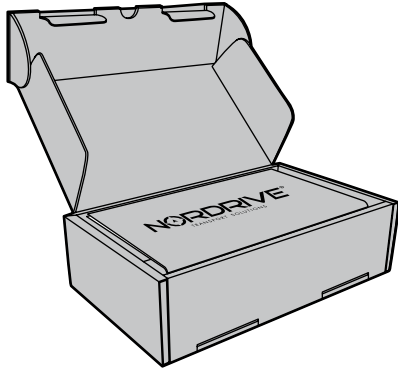





NORDRIVE[®]

TRANSPORT SOLUTIONS

Art. **N30353**

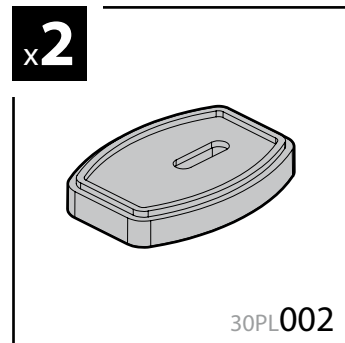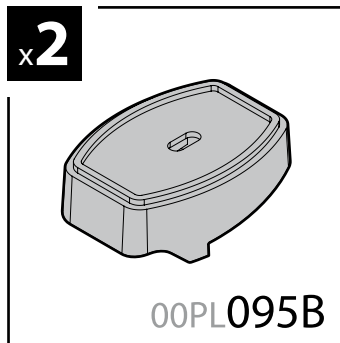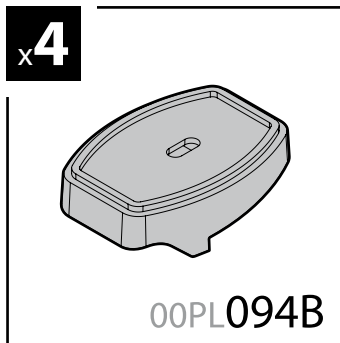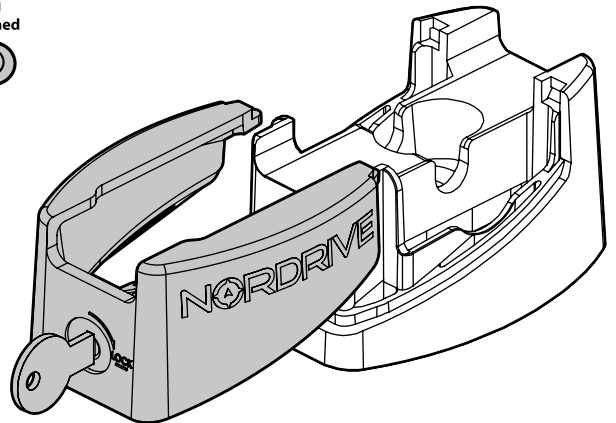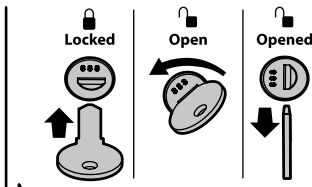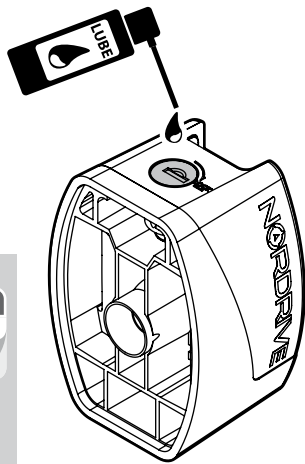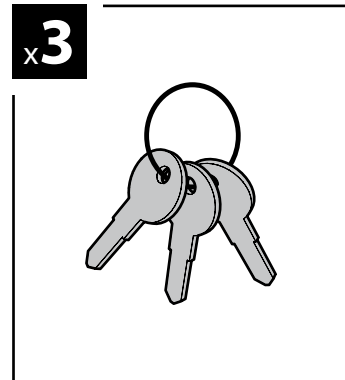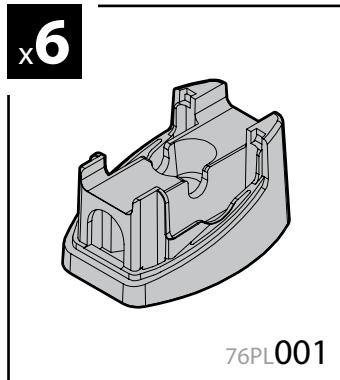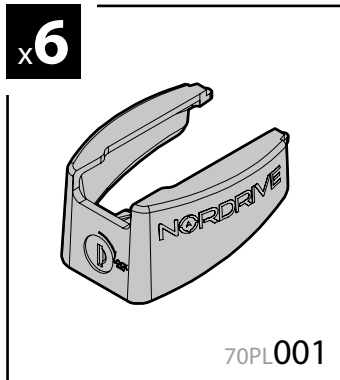

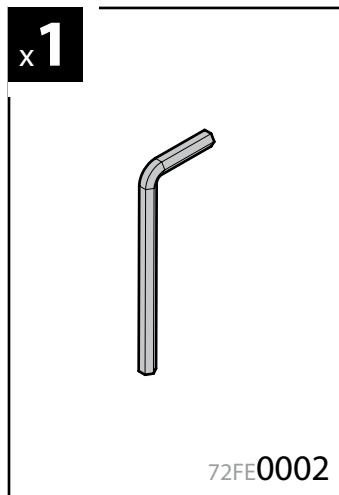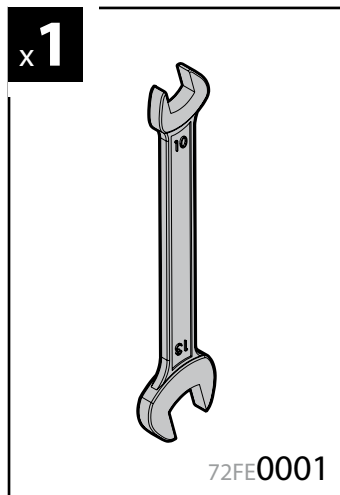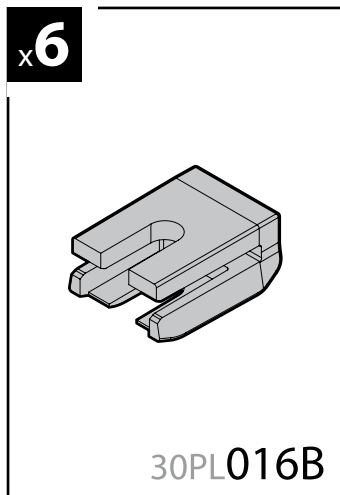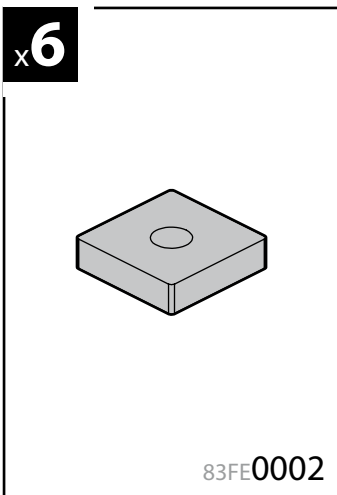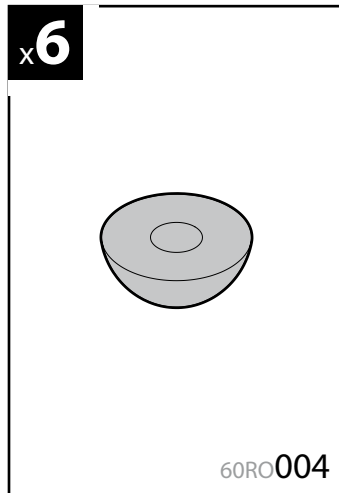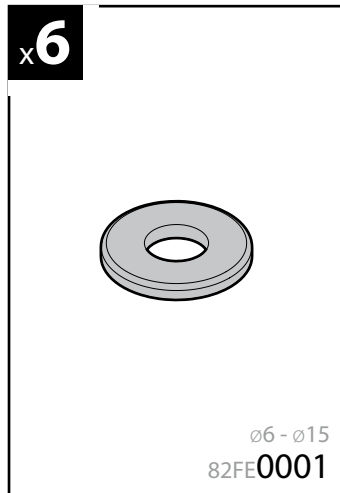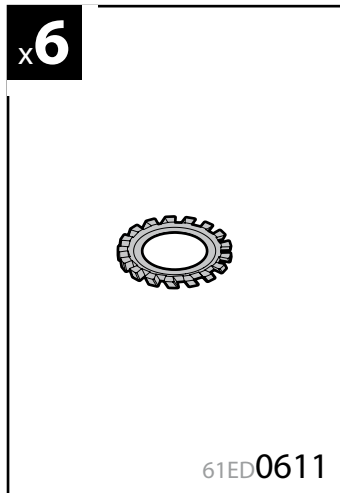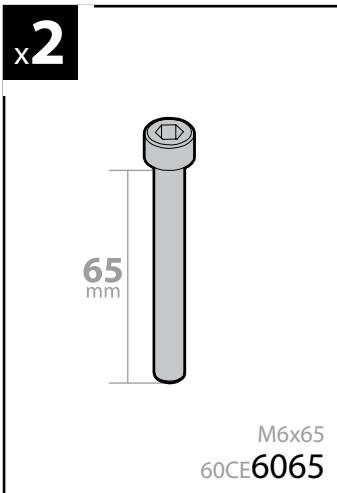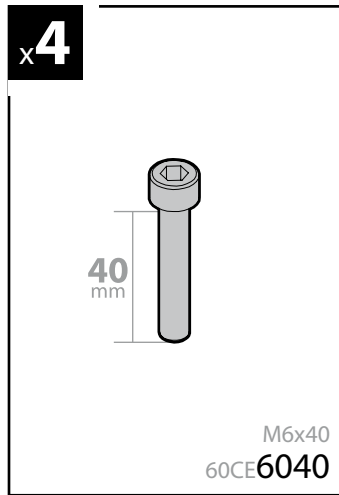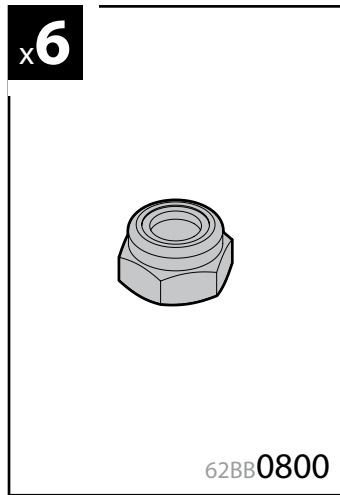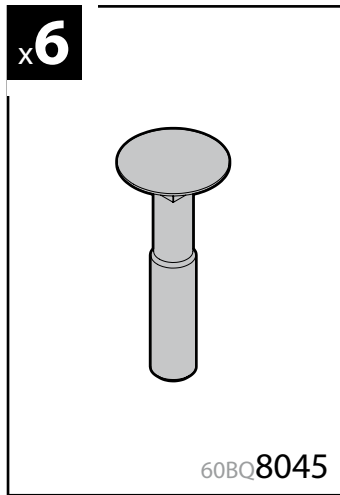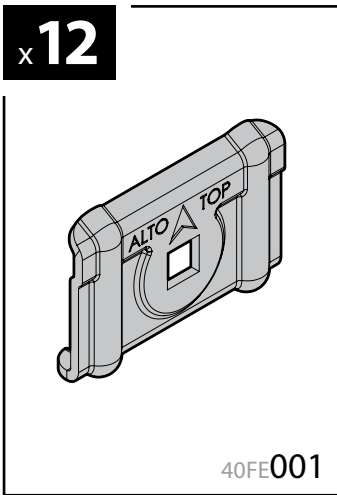



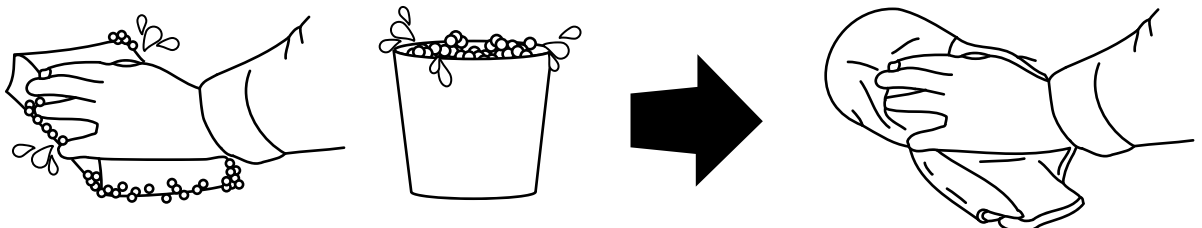
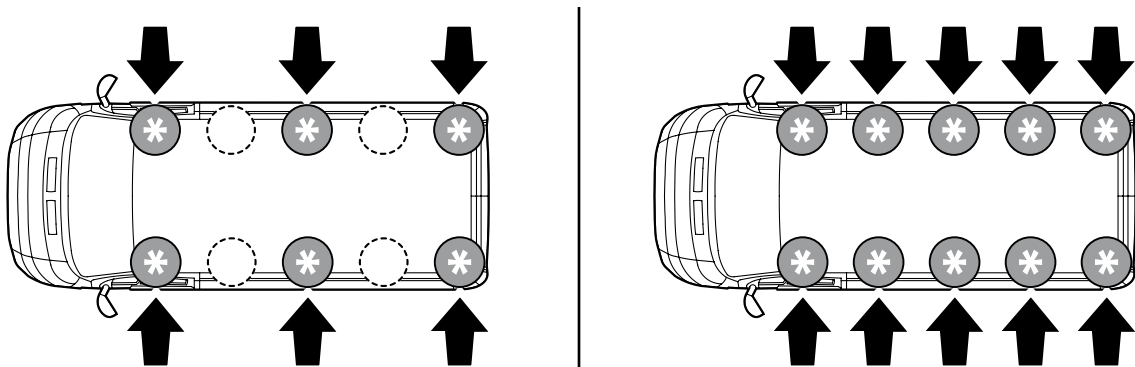
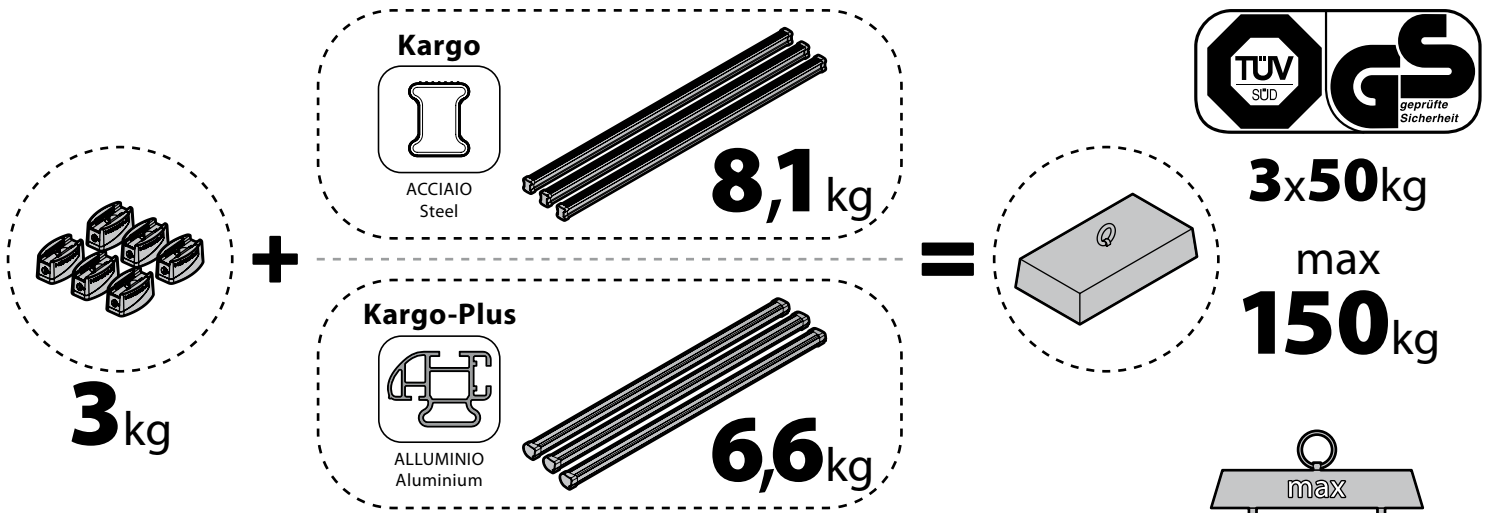


(I) ISTRUZIONI DI MONTAGGIO
 (GB) FITTING INSTRUCTIONS
 (D) MONTAGEANLEITUNG
 (F) INSTRUCTIONS DE MONTAGE
 (E) INSTRUCCIONES DE MONTAJE
 (P) INSTRUÇÕES DE MONTAGEM
 (NL) MONTAGE-INSTRUCTIES
 (S) MONTERINGSANVISNING

(FIN) ASENNUSOHJE
 (EST) PAIGALDUSJUHEND
 (LAT) STIPRIŅĀŠANAS INSTRUKCIJA
 (LT) PRITVIRTINIMO INSTRUKCIJOS
 (PL) INSTRUKCJA MONTAŻU
 (RUS) Инструкции по установке
 (CZ) NÁVOD NA MONTÁŽ
 (SK) NÁVOD NA MONTÁŽ


(SLO) NAVODILA ZA PRITRJEVANJE
 (HR) UPUTA ZA SASTAVLJANJE
 (H) A FELSZERELÉS MÓDJA
 (GR) Οδηγία συναρμολόγησης
 (TR) MONTAJ TALIMATLARL
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
 (SRB) UPUTSTVA ZA MONTAŽU

1

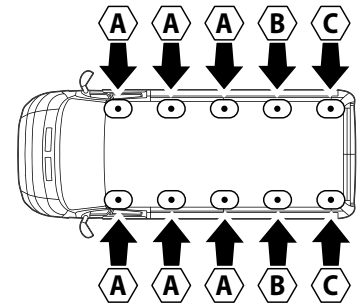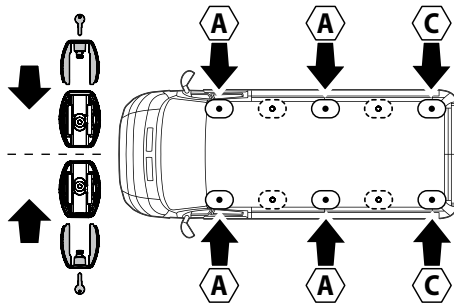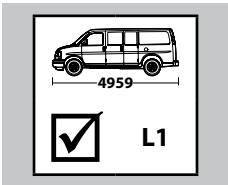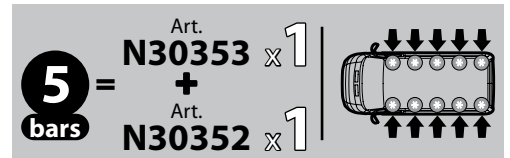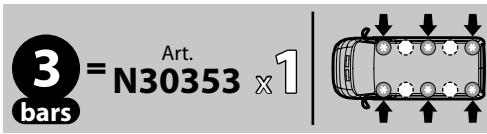


2

A

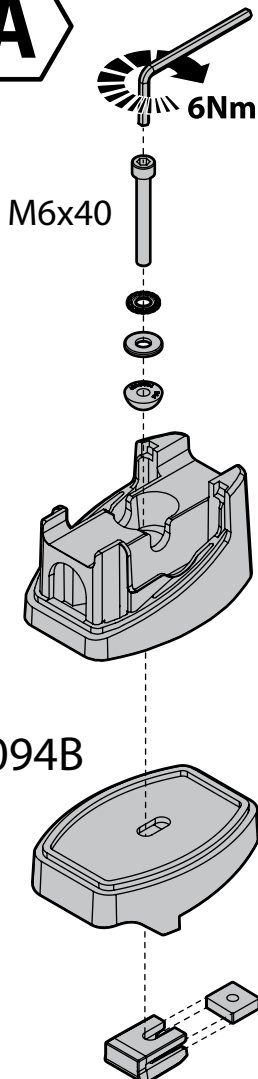


2

B


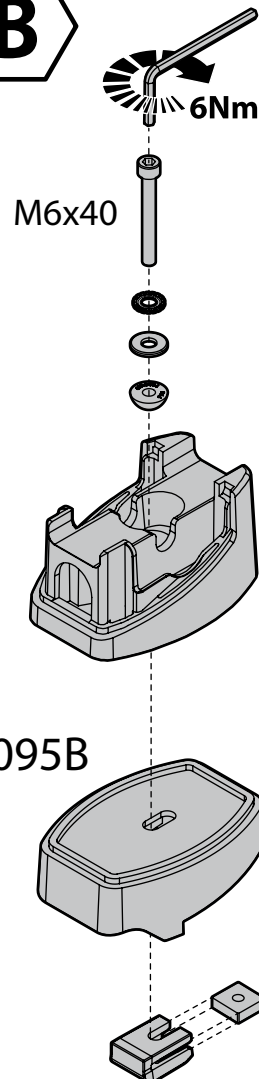


2




C

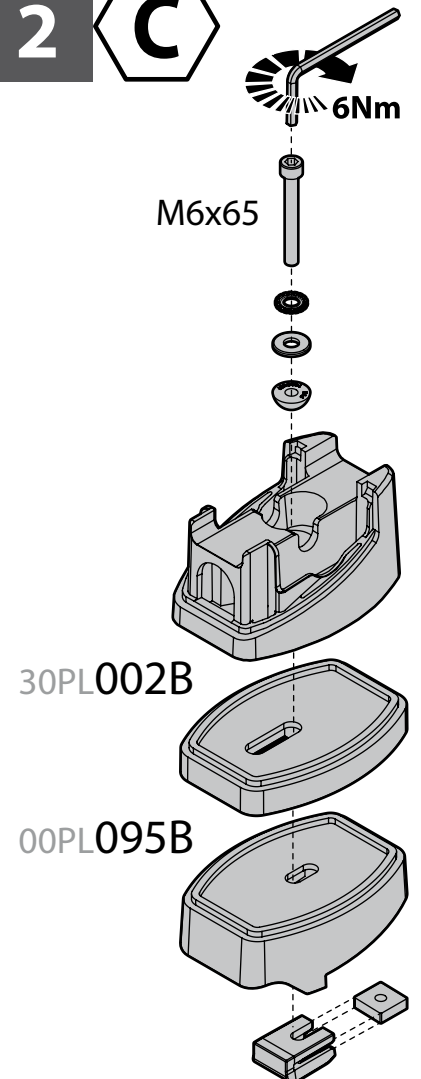

3

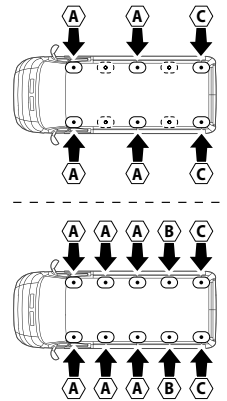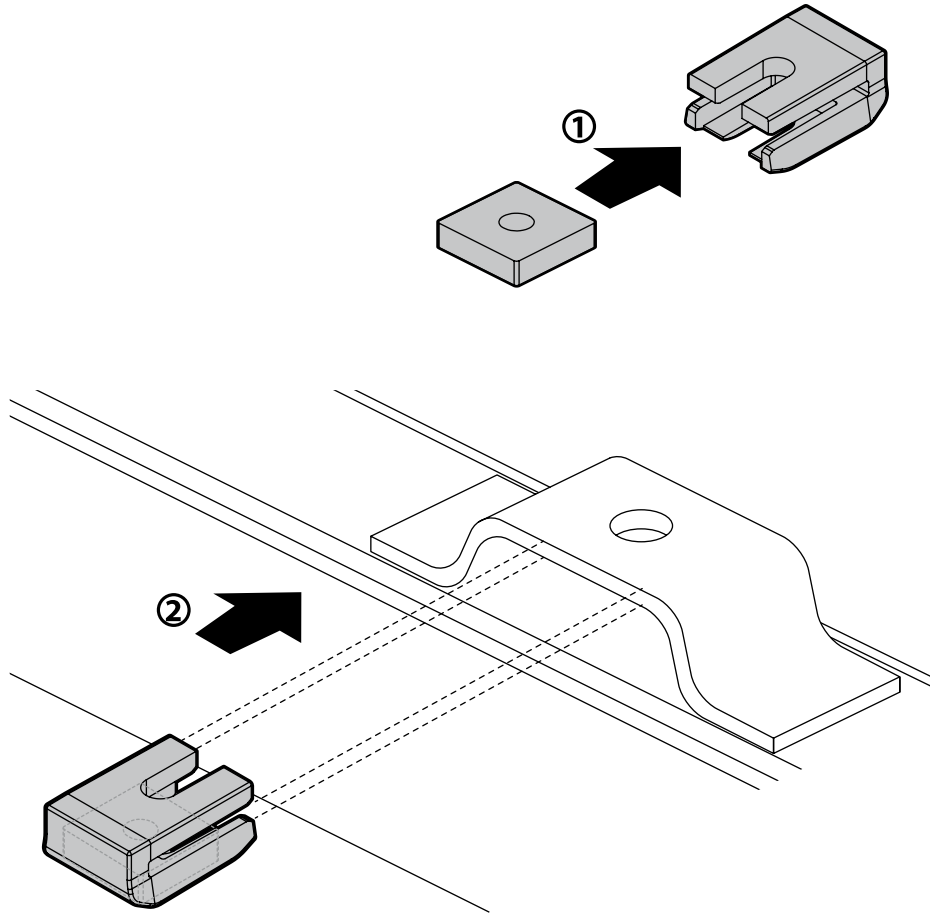

4

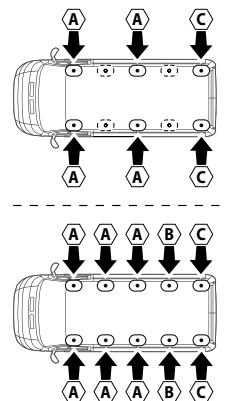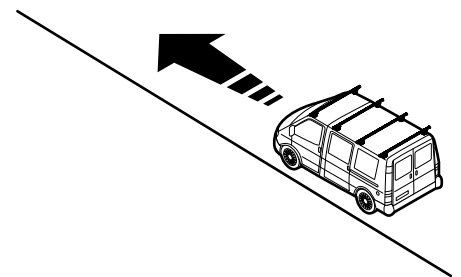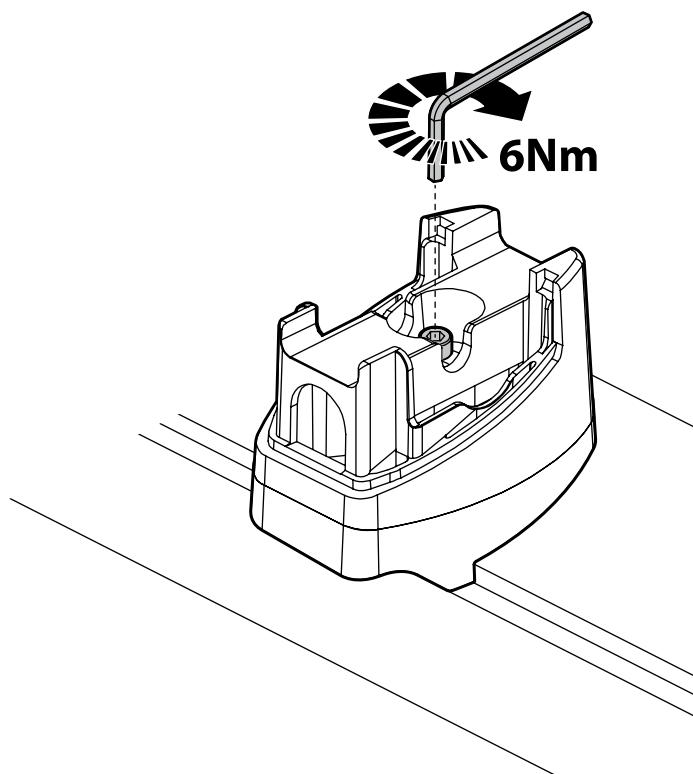



ATTENZIONE WARNING




A

Kargo



ACCIAIO
Steel

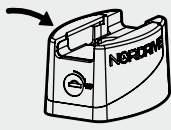


MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE

B

Kargo-Plus






ALLUMINIO
Aluminium



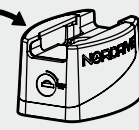


MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE


OK ✓

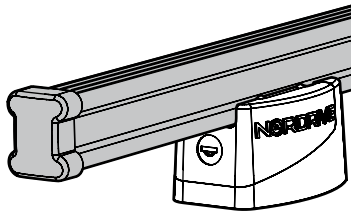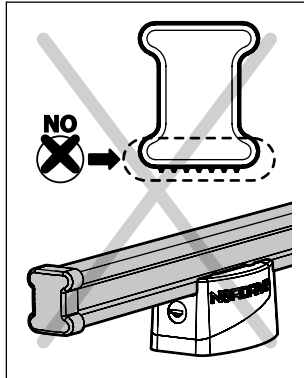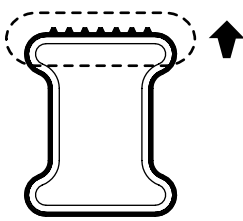



OK ✓

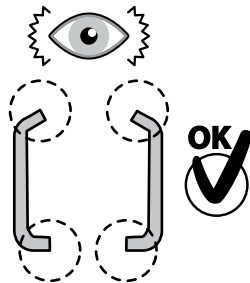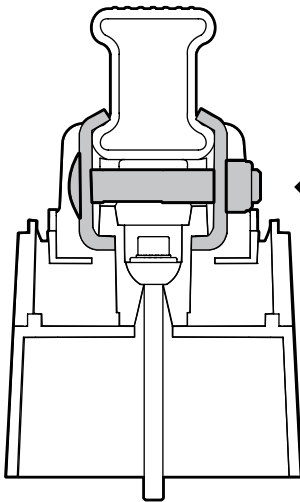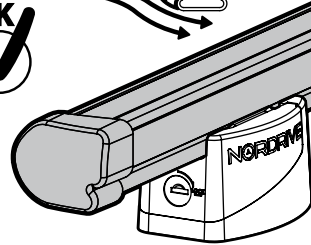


OK ✓

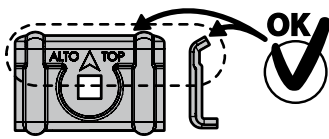



OK ✓

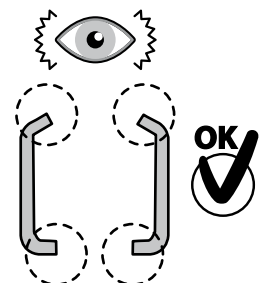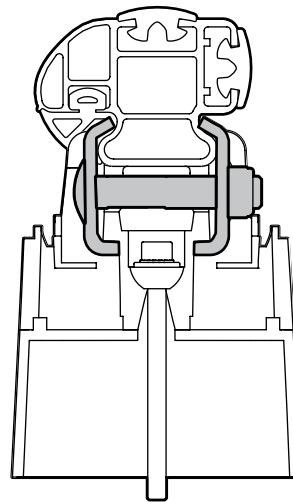

OK ✓

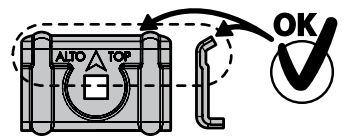


OK ✓

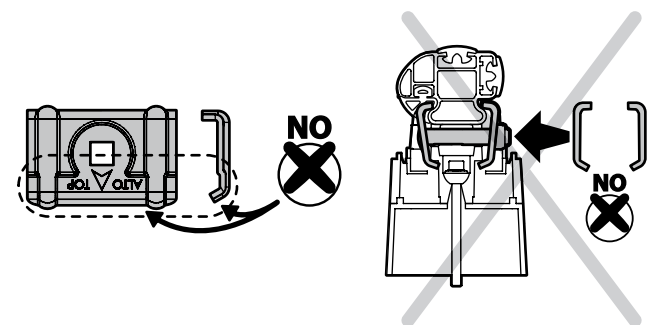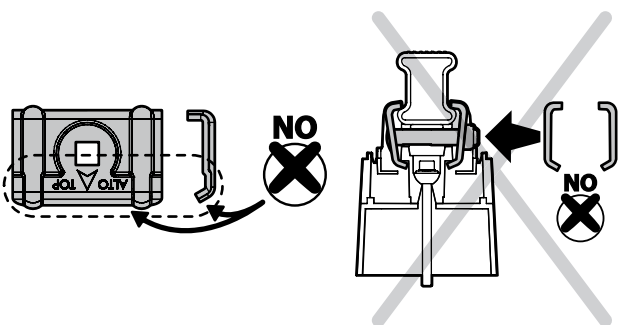

5

A

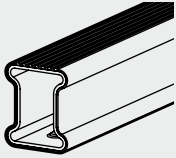

Kargo
ACCIAIO
Steel


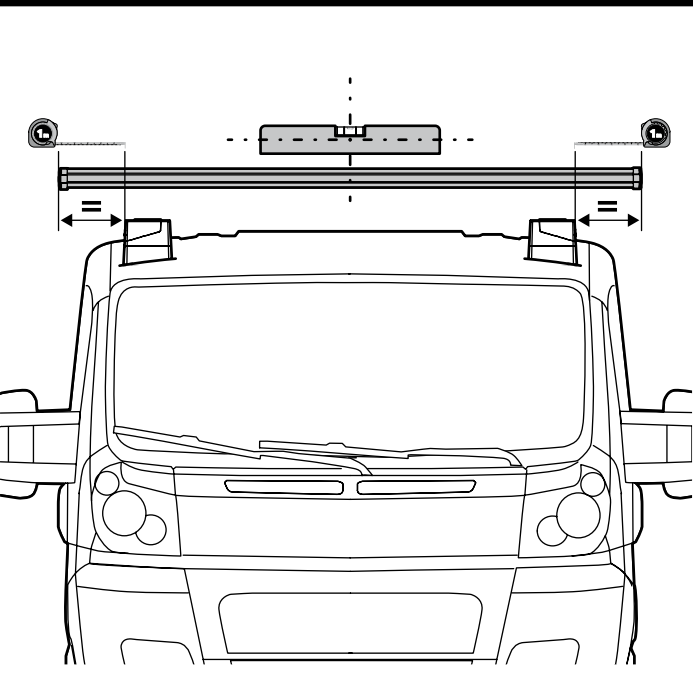


Diagram showing the installation of the Kargo steel bar on a vehicle roof. The bar is shown being placed over the roof rails. Arrows indicate the placement of the bar ends. A small inset shows the bar's cross-section.

B

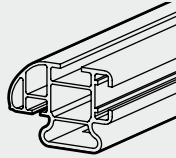

Kargo-Plus
ALLUMINIO
Aluminium

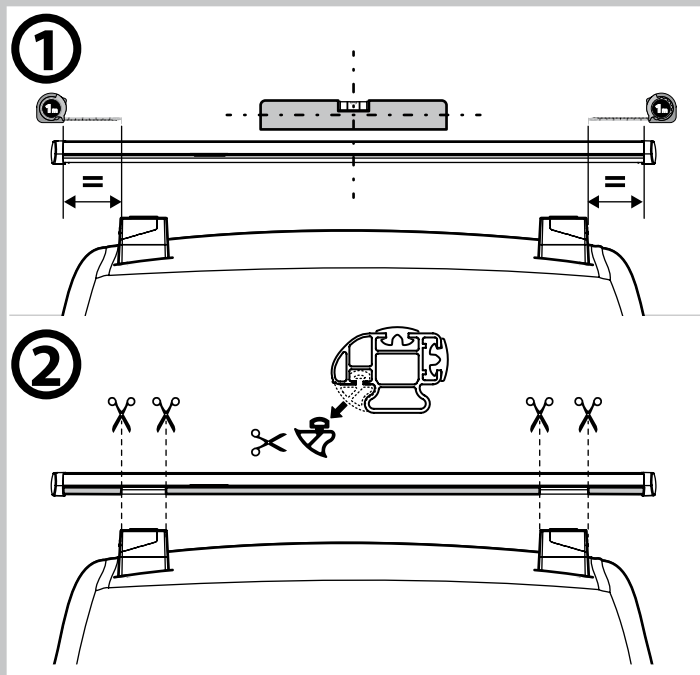


Diagram showing the installation of the Kargo-Plus aluminium bar on a vehicle roof. Step 1 shows the bar being placed over the roof rails. Step 2 shows the bar being secured with clips. Arrows indicate the placement of the bar ends. A small inset shows the bar's cross-section.

6

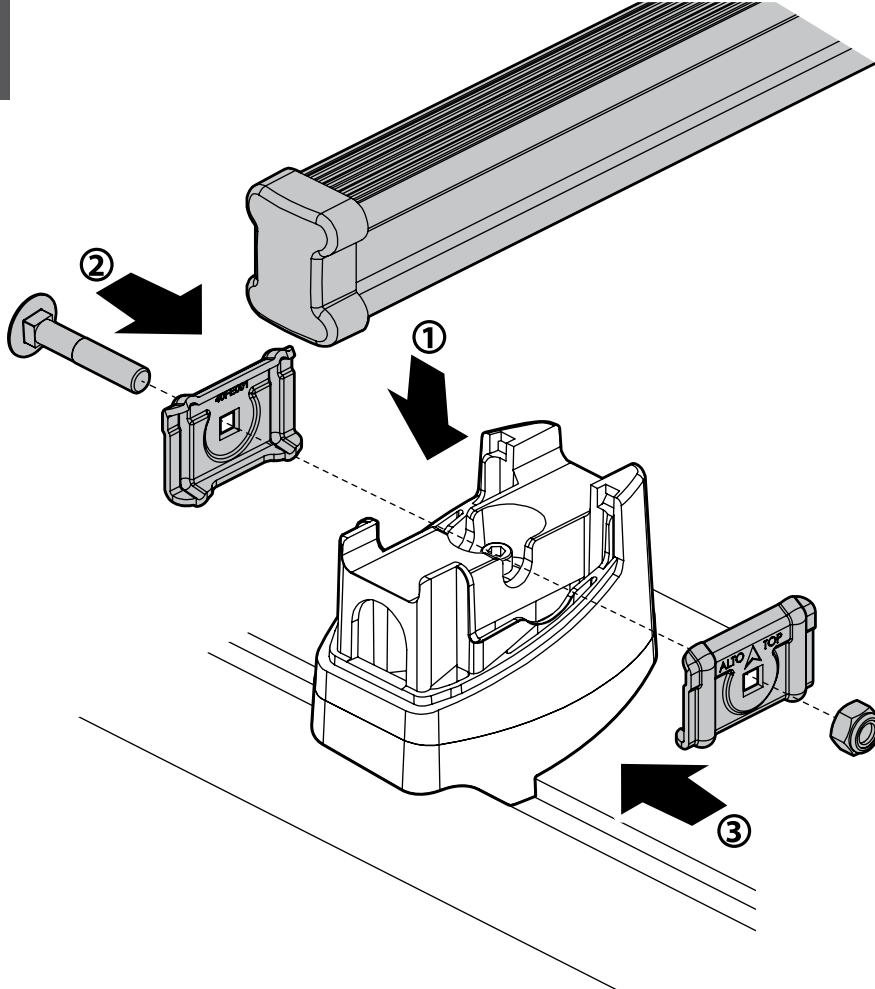


Diagram showing the assembly of the Kargo-Plus bar. Step 1 shows the bar being inserted into the base. Step 2 shows the bar being secured with a bolt. Step 3 shows the bar being secured with a nut. A small inset shows the bar's cross-section.

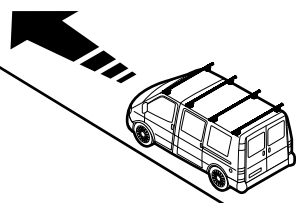


Diagram showing a vehicle with the Kargo-Plus bar installed on its roof. An arrow points to the right, indicating the direction of travel.



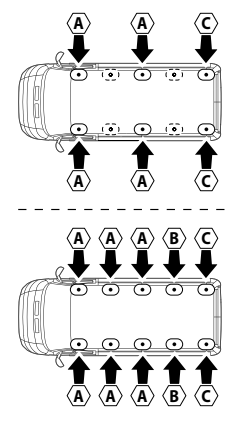


Diagram showing the mounting points for the Kargo-Plus bar. The top row shows points A, A, and C. The bottom row shows points A, A, A, B, and C. Arrows indicate the direction of the mounting points.

7

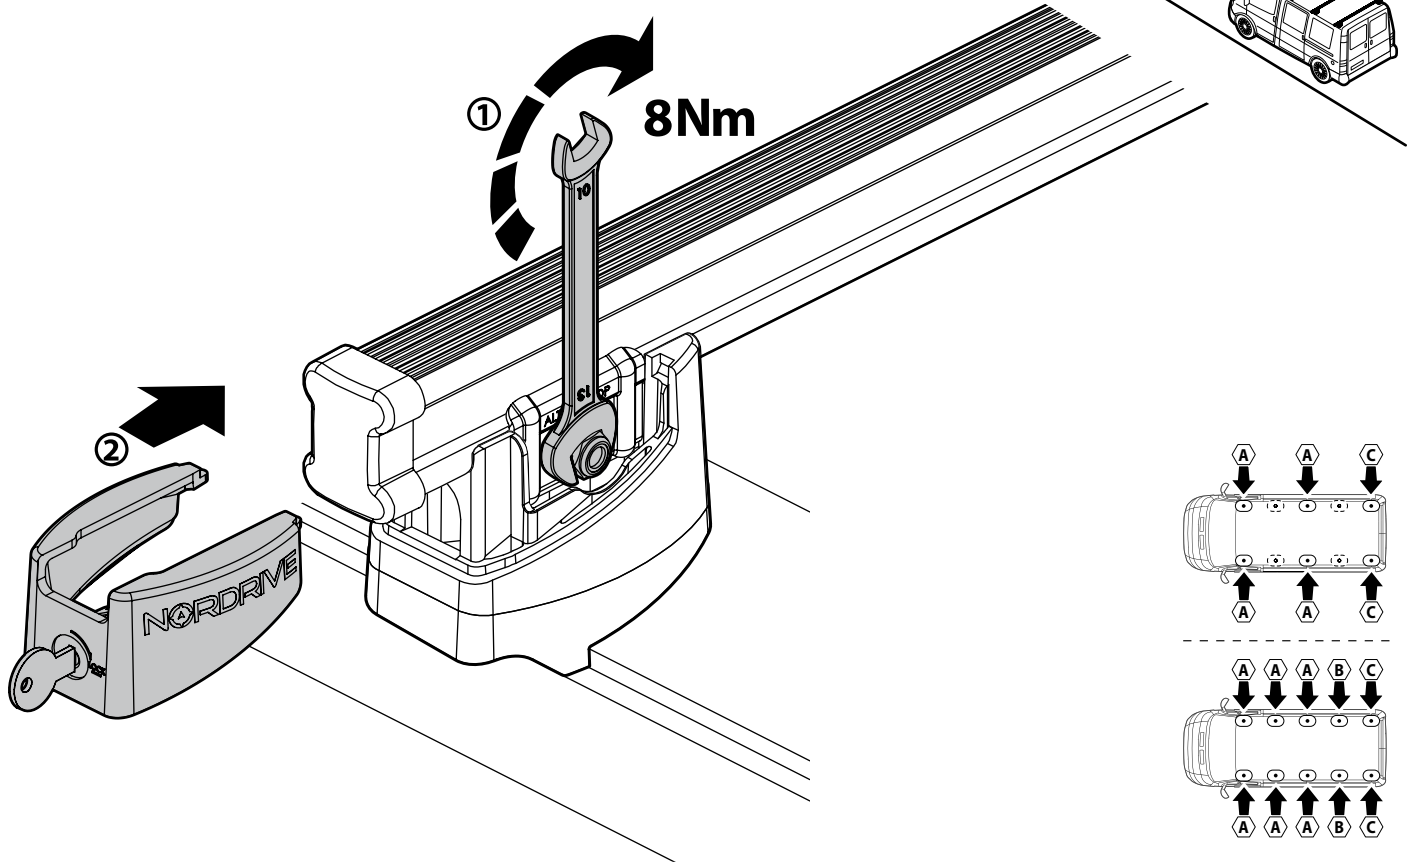


8

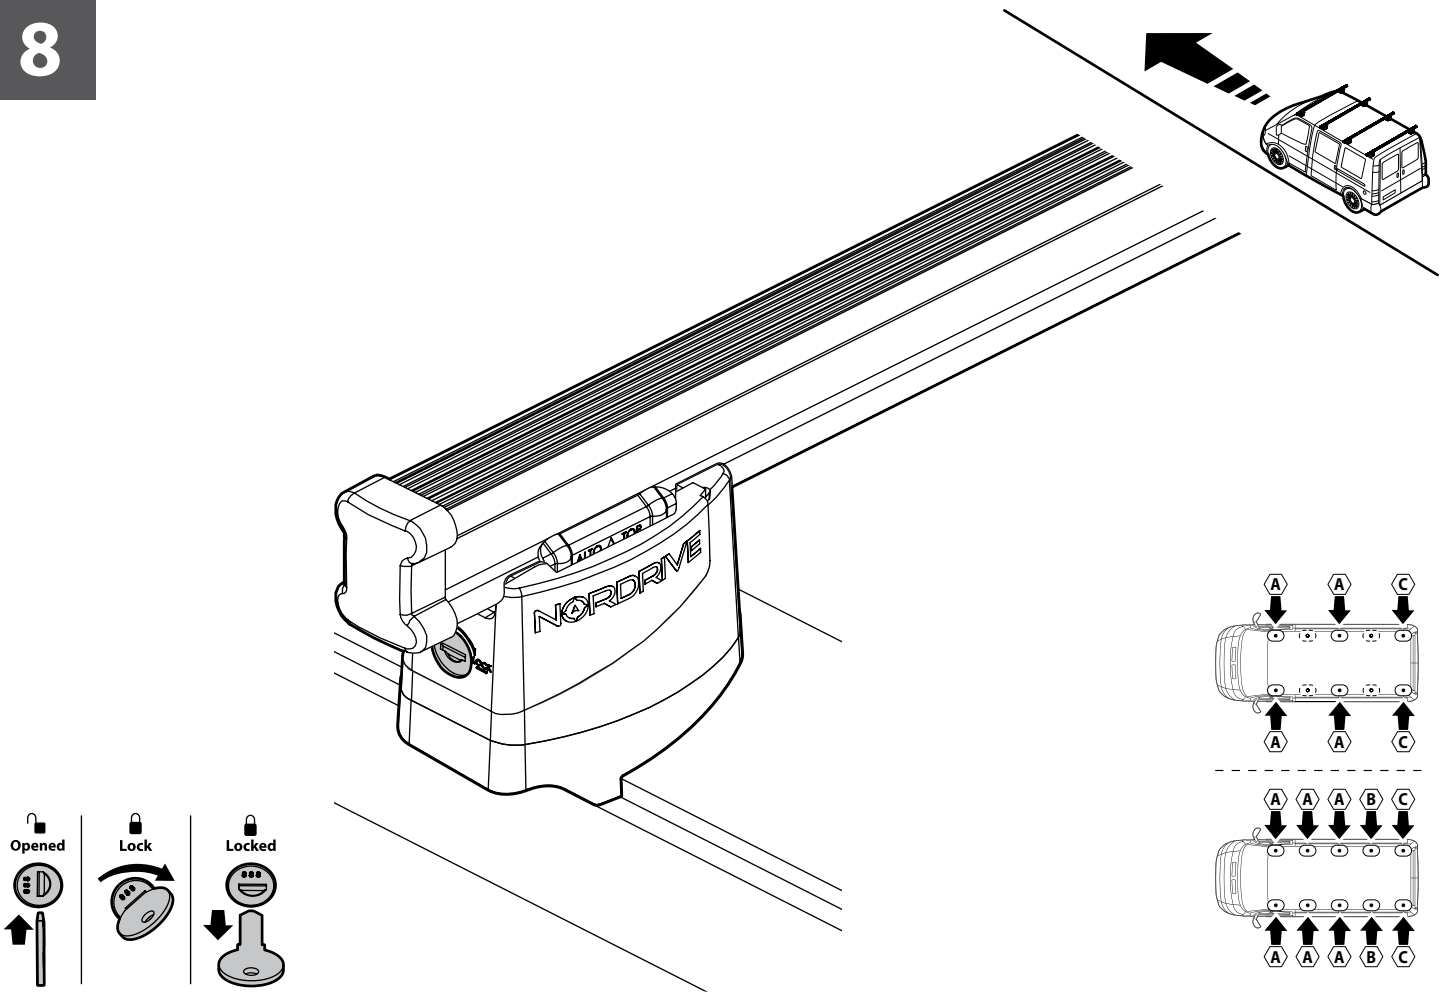

Kargo series




Acciaio / Steel

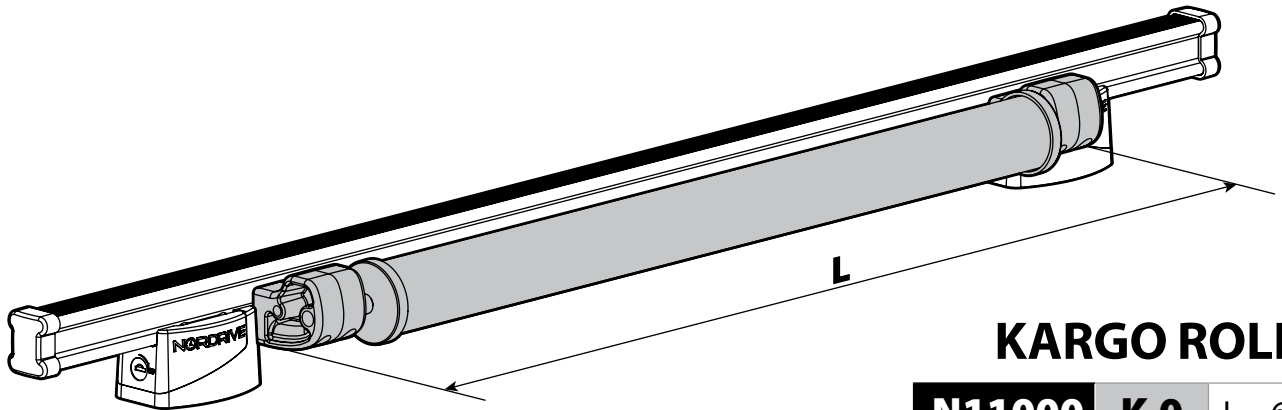


KARGO ROLLER

N11000	K-0	L = 64 cm
N11003	K-7	L = 96 cm

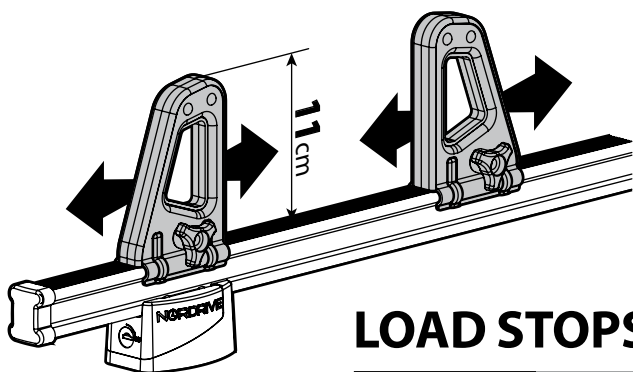


LOAD STOPS

N11001 K-1

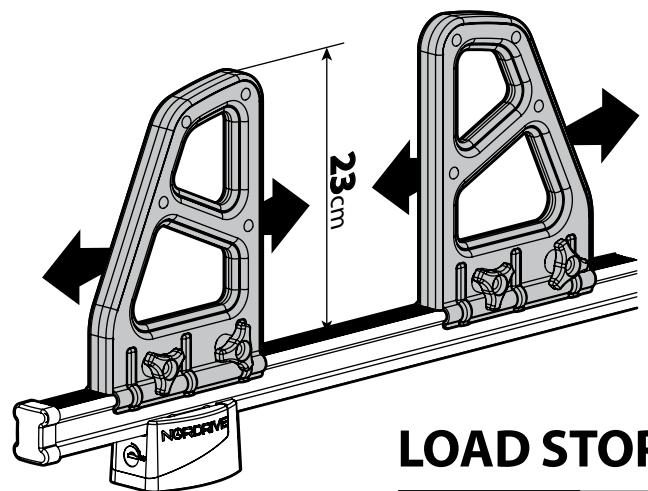

LOAD STOPS

N11002 K-2

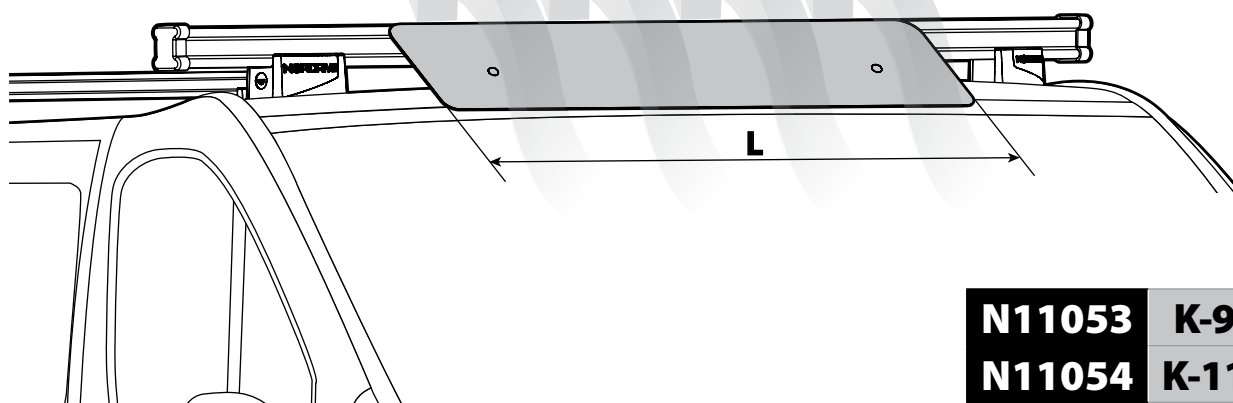


SPOILER


N11053	K-9	L = 95 cm
N11054	K-11	L = 110 cm

OPTIONALS PER / FOR / FÜR:

Kargo-Plus series


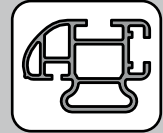


Alluminio / Aluminium

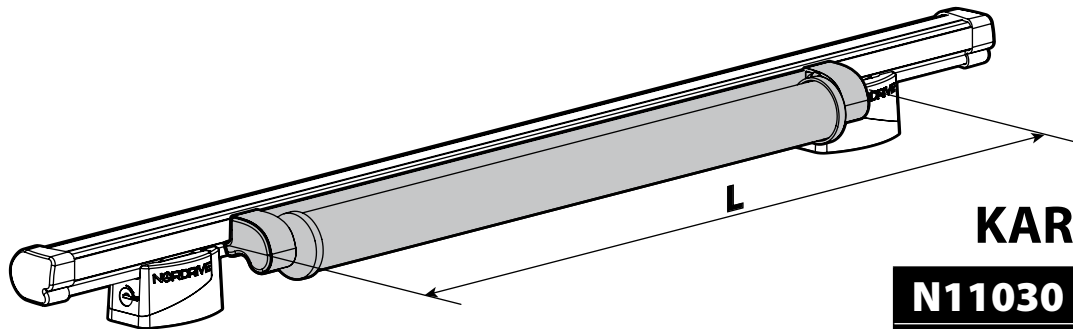


KARGO ROLLER

N11030	KP-0	L = 64 cm
N11034	KP-7	L = 96 cm

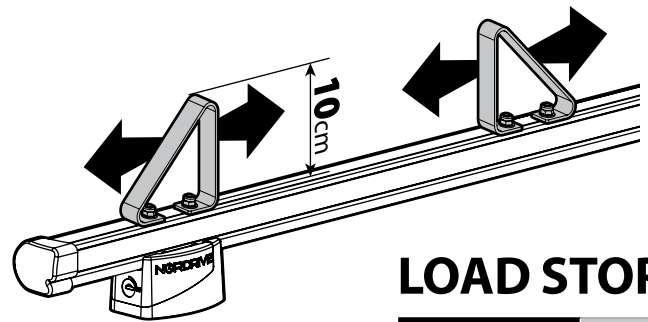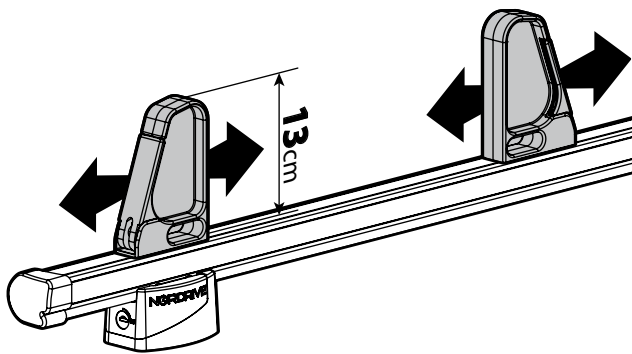


LOAD STOPS

N11031 KP-1

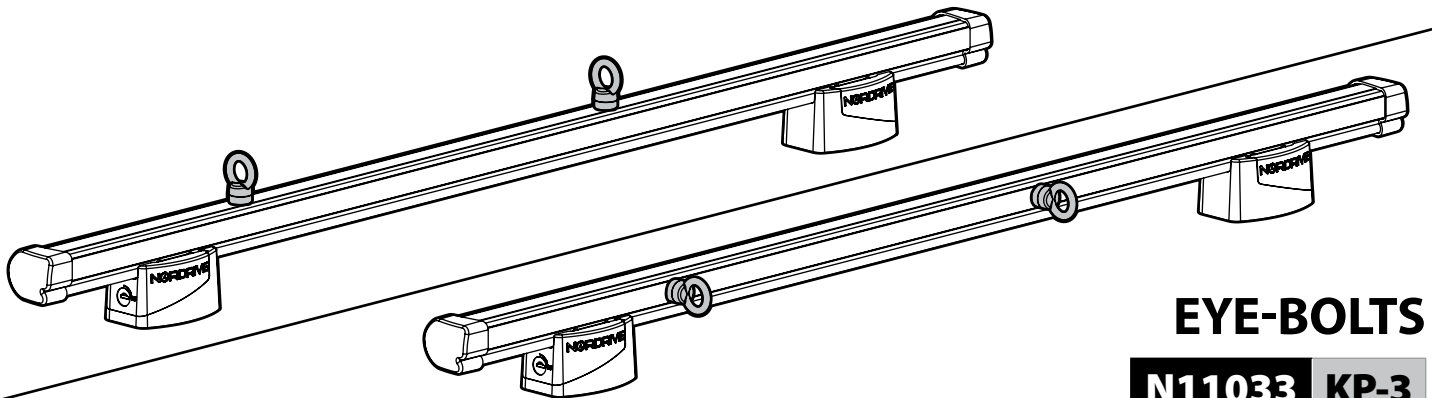

EYE-BOLTS

N11033 KP-3

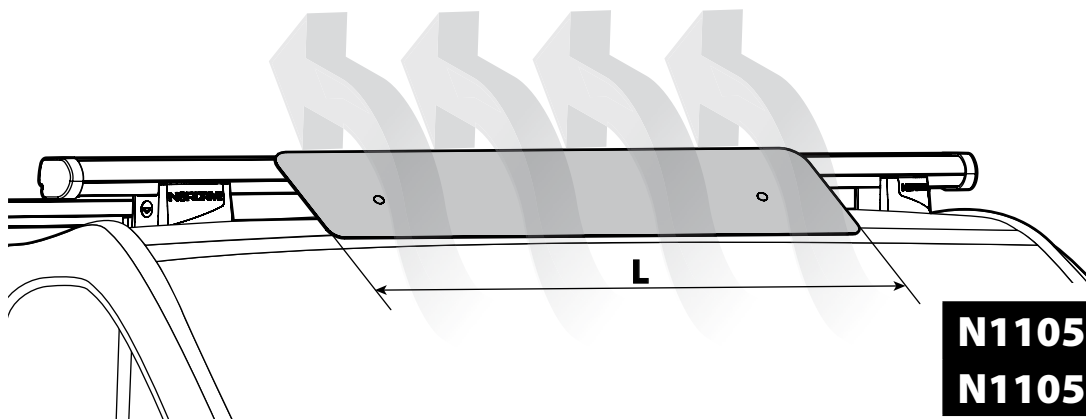

SPOILER

N11057	KP-9	L = 95 cm
N11058	KP-11	L = 110 cm


OPTIONALS PER / FOR / FÜR:

Kargo series



Acciaio / Steel


Kargo-Plus
series

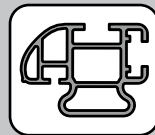

Alluminio / Aluminium



KARGO-TUBE

N11050	T200	L = 205 cm
N11051	T300	L = 305 cm
N11052	T400	L = 405 cm

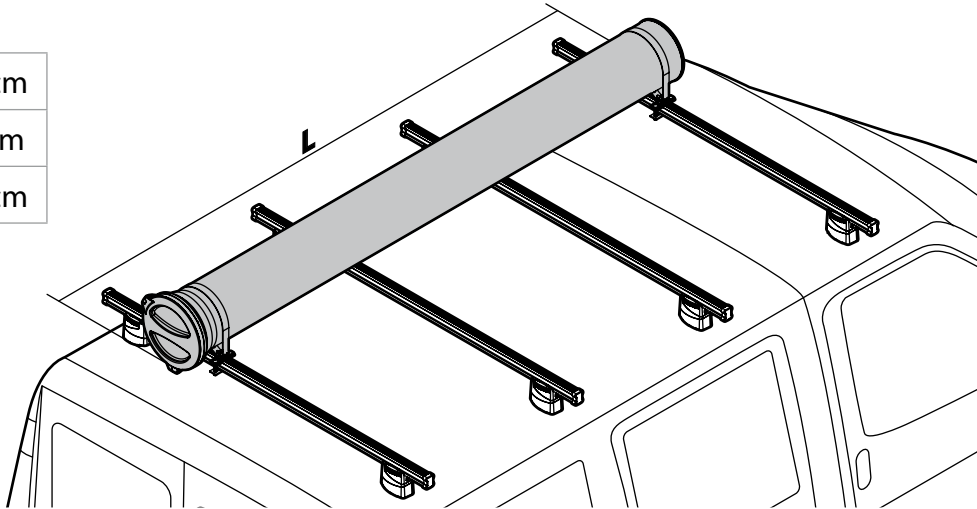


LADDER HOLDER STRAPS

N11065 U-5

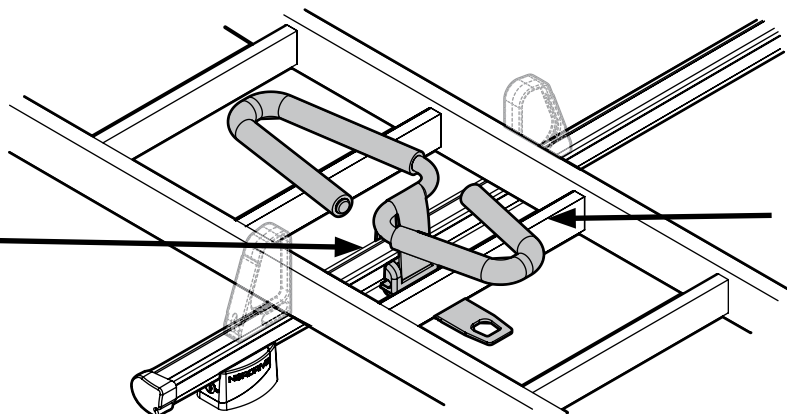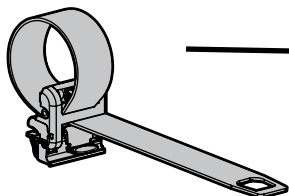


LADDER STEP ADAPTER

N11067 U-6

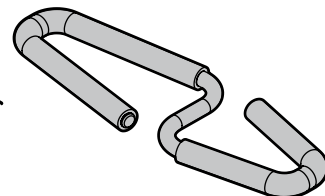

EXTENSION ROLLER

N11020	U-0	L = 64 cm
N11021	U-7	L = 96 cm

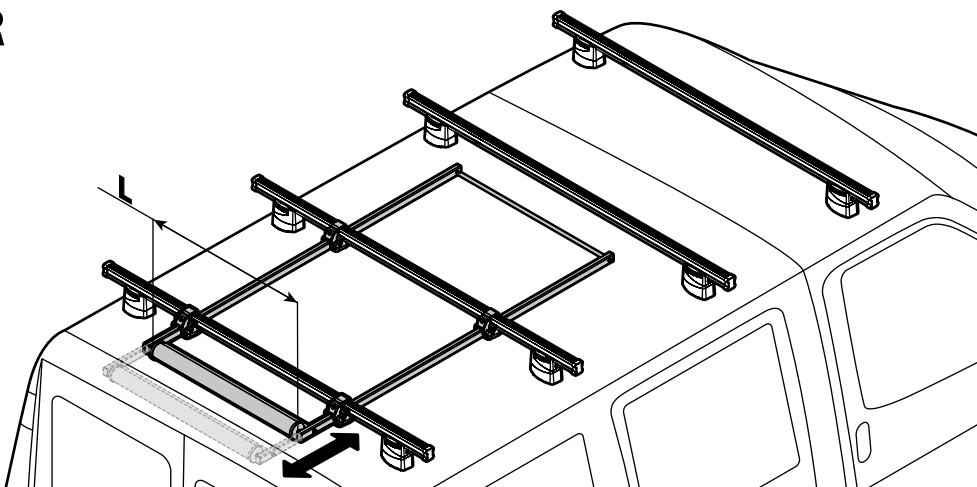

- (I) Lotto di produzione da comunicare per eventuali ricambi
- (GB) Production lot number to be communicated for any spare parts
- (F) Lot de production à communiquer pour toute pièce de rechange
- (D) Produktionscharge für eventuelle Ersatzteile
- (E) Lote de producción a comunicar por cualquier repuesto

Lot.

NORDRIVE®
TRANSPORT SOLUTIONS

NORDRIVE® is a registered trademark of
LAMPA S.p.A.
Via G. Rossa 53/55, 46019 Viadana (MN) ITALY
Tel. +39 0375 820700
UNI EN ISO 9001:2008 Certified Company
www.nordrive.it
www.lampa.it